



# 830-01<sup>Q&As</sup>

RCPE Certified Professional WAN Optimization

**Pass Riverbed 830-01 Exam with 100% Guarantee**

Free Download Real Questions & Answers **PDF** and **VCE** file from:

<https://www.pass4itsure.com/830-01.html>

100% Passing Guarantee  
100% Money Back Assurance

Following Questions and Answers are all new published by Riverbed  
Official Exam Center

-  **Instant Download** After Purchase
-  **100% Money Back** Guarantee
-  **365 Days** Free Update
-  **800,000+** Satisfied Customers



**QUESTION 1**

If a Steelhead appliance is configured for logical in-path mode:

- A. The Primary interface cannot be on the same subnet
- B. The LAN In-path interface will be disabled
- C. The WAN In-path interface will be disabled
- D. The Steelhead appliance listens for the Interceptor on TCP port 7860

Correct Answer: B

---

**QUESTION 2**

A SteelHead is running RiOS v8.6 and has an inpath0\_0 IP address of 192.168.1.10. It is later upgraded from v8.6 to v9.0. As part of an IT project, the inpath0\_0 IP address is changed to 10.10.10.10 and the configuration saved. Some time passes and the administrator decides to revert to RiOS v 8.6. It hasn't been factory reset. The appliance boots and the Management Console User Interface is reachable, however, optimization no longer works. What has happened?

- A. The web GUI SSL certificate is no longer trusted and the services require a restart.
- B. The licenses are no longer valid and will need to be replaced and the services restarted.
- C. It is not possible to revert to older versions of RiOS and the optimization service has stopped as a precaution.
- D. The configuration has reverted to the one running under v8.6 and the inpath0\_0 IP address is back to 192.168.1.10.
- E. The configuration has been lost and the appliance is running factory default settings.

Correct Answer: D

---

**QUESTION 3**

-- Exhibit



### Manage > Appliances ?

| + New Group              |  | + New Appliance | - Remove Selected          | ⇅ Move Selected | Filter | Appliance Operations |                     |
|--------------------------|--|-----------------|----------------------------|-----------------|--------|----------------------|---------------------|
| <input type="checkbox"/> | Groups and Managed Appliances          | Product / Model | Connection                 | ⋮               | +*     | ⚙                    | Optimization Policy |
| <input type="checkbox"/> | ▼ Global                               |                 |                            |                 |        |                      |                     |
| <input type="checkbox"/> | 🔍 SH10 / 192.168.99.10 (V705J000C84AE) | SH V250H        | Connected: Degraded        |                 |        | ⚙                    |                     |
| <input type="checkbox"/> | 🔍 SH11 / 192.168.99.11 (V70HP000C84B0) | SH V250H        | Connected: Needs Attention |                 |        | ⚙                    |                     |
| <input type="checkbox"/> | 🔍 SH12 / 192.168.99.12 (V70MG000C74FE) | SH V250H        | Connected: Needs Attention |                 |        | ⚙                    |                     |
| <input type="checkbox"/> | 🔍 SH13 / 192.168.99.13 (V70JQ000C7488) | SH V250H        | Connected: Healthy         |                 |        |                      |                     |

-- Exhibit -Refer to the exhibit. According to the screenshot, what does the highlighted symbol represent? (Select 2)

- A. The configuration of the Steelhead appliances on that cluster are not the same.
- B. The configuration of each one of those Steelhead appliances are different than the one on the CMC.
- C. It's missing a Push.
- D. It's not missing a Push.

Correct Answer: BC

#### QUESTION 4

Which hypervisor platforms are officially supported by Virtual SteelHead? (Choose three.)

- A. Virtual Box
- B. Hyper-V
- C. KVM



D. VMware Fusion

E. ESXi

Correct Answer: BCE

---

#### QUESTION 5

How can you enable SkipWare?

A. SkipWare is enabled automatically when the license is installed.

B. On the Management Console host settings menu.

C. SkipWare is enabled by default.

D. On the Management Console high-speed TCP menu.

Correct Answer: A

[Latest 830-01 Dumps](#)

[830-01 VCE Dumps](#)

[830-01 Study Guide](#)