



HPE0-V14^{Q&As}

Building HPE Hybrid IT Solutions

Pass HP HPE0-V14 Exam with 100% Guarantee

Free Download Real Questions & Answers **PDF** and **VCE** file from:

<https://www.pass4itsure.com/hpe0-v14.html>

100% Passing Guarantee
100% Money Back Assurance

Following Questions and Answers are all new published by HP Official Exam Center

-  **Instant Download** After Purchase
-  **100% Money Back** Guarantee
-  **365 Days** Free Update
-  **800,000+** Satisfied Customers





QUESTION 1

A customer needs to enable HPE Proactive Care and automated case creation for server hardware failures in their OneView environment.

Which step do you need to complete in OneView to accomplish these tasks?

- A. Enable remote support from the Settings page.
- B. Apply the OneView Advanced monitoring license.
- C. Add the hosts to the managed devices group.
- D. Configure proactive scan reports.

Correct Answer: A

QUESTION 2

A customer requires a storage platform for their department data. They have a limited budget and will be sharing files among their Microsoft Windows environment.

Which HPE storage platform meets the customer's needs?

- A. Nimble
- B. StoreOnce
- C. 3PAR StoreServ
- D. StoreEasy

Correct Answer: D


QUESTION 3

HOTSPOT


You need to review a warning on a Nimble storage array.

Click on the menu option that displays this information.

Hot Area:

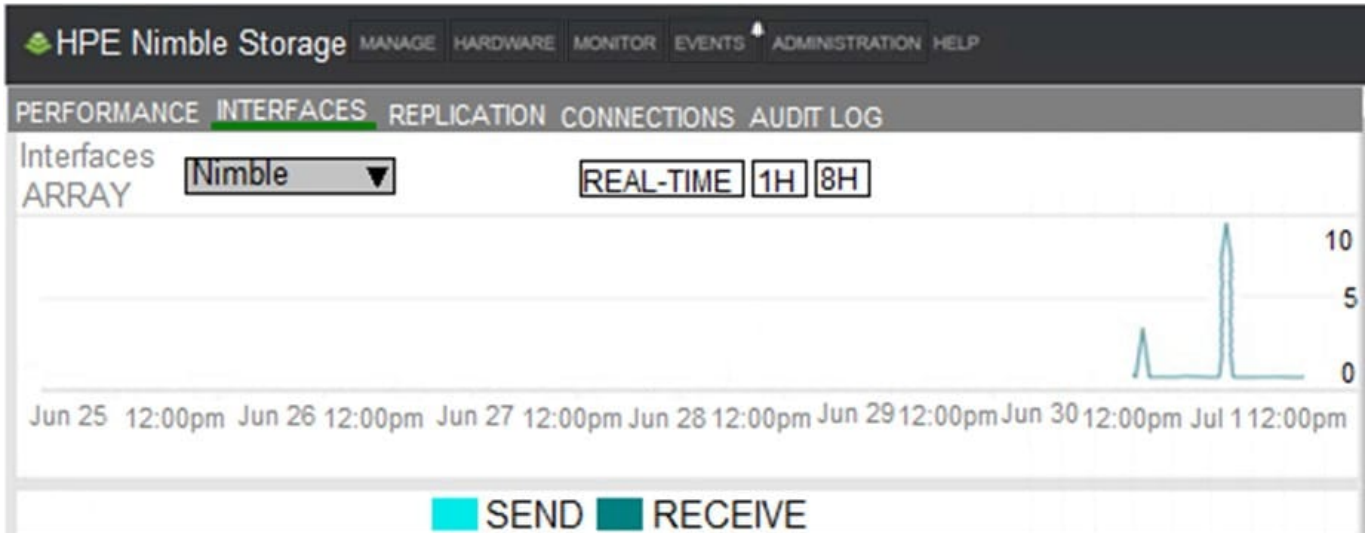

Correct Answer:

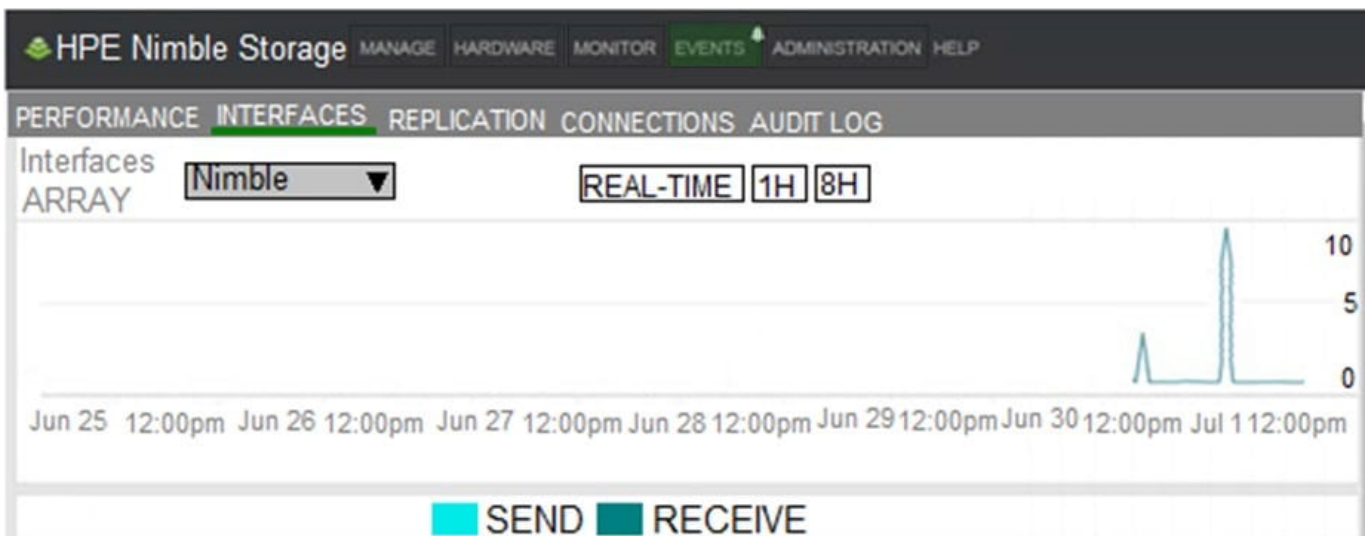

Reference: https://infosight.hpe.com/InfoSight/media/cms/active/public/pubs_GUI_Administration_Guide_NOS_50x.whz/axc1501525262696.html

QUESTION 4

A customer plans to use HPE ProLiant servers for an application that requires low latency for all components.

Which workload profile should the customer use?

- A. Mission Critical
- B. Virtualization ?Max Performance
- C. I/O Throughput
- D. Transactional Application Processing



Correct Answer: A

QUESTION 5

You are installing new drives into the internal cage of a HPE ProLiant DL380 server. How is the drive device number set?

- A. The Smart Array controller assigns the device number automatically based on the bay
- B. HPE OneView uses the server profile to assign the device number
- C. The operating system assigns the device number automatically based on the drive installation order
- D. You must use Smart Storage Administrator to assign the device number

Correct Answer: A

[Latest HPE0-V14 Dumps](#)

[HPE0-V14 Exam Questions](#)

[HPE0-V14 Braindumps](#)