

# HQT-4120<sup>Q&As</sup>

Hitachi Vantara Qualified Professional VSP G200 to VSP G800 Storage Installation

## Pass Hitachi HQT-4120 Exam with 100% Guarantee

Free Download Real Questions & Answers **PDF** and **VCE** file from:

https://www.pass4itsure.com/hqt-4120.html

### 100% Passing Guarantee 100% Money Back Assurance

Following Questions and Answers are all new published by Hitachi Official Exam Center

Instant Download After Purchase

- 100% Money Back Guarantee
- 😳 365 Days Free Update
- 800,000+ Satisfied Customers





#### **QUESTION 1**

Which three drive box types are supported on the VSP Gx00 series? (Choose three.) Choose 3 answers

A. DBL

B. DBX

- C. DBS
- D. DBM
- E. DB60

Correct Answer: ACE

#### **QUESTION 2**

Which Interfacing software gets Installed in the Maintenance PC (MPC) on a VSP Gx00 system?

- A. Device Manager Storage Navigator
- B. Hitachi Command Suite
- C. Block Element Manager
- D. Hitachi Command Director

Correct Answer: C

#### **QUESTION 3**

From which two locations can the Maintenance Utility be Invoked on a VSP G800? (Choose two.)

- A. the SVP Web Console
- B. Hitachi Command Suite (HCS)
- C. Hitachi Infrastructure Director (HID)
- D. MPC connected to the Maintenance LAN port on the array

Correct Answer: BD

#### **QUESTION 4**

What should you do first when upgrading the SVP software of a VSP Gx00 system?

A. Run the "setup.exe" program as an administrator user.

- B. Log into GUM and select "SVP upgrade".
- C. Log into Storage Navigator and select "SVP upgrade".
- D. Log into the SVP, stop the SVP services and reboot the SVP.

Correct Answer: A

#### **QUESTION 5**

A customer wants to change a production RAID group from RAID 5 (7D+1P) to RAID 6 (6D+2P) on a VSP

G600 during normal operations. They have just unmapped the LUNs from the channel ports.

- What needs to be performed next?
- A. Parity groups must be deleted.
- B. The RAID level must be changed in Storage Navigator.
- C. The RAID level in the SVP Maintenance window must be changed.
- D. The RAID 5 group must be put into DRU mode in Storage Navigator.

Correct Answer: A

Latest HQT-4120 Dumps

HQT-4120 VCE Dumps

HQT-4120 Practice Test